


# INSTALLATION PROCEDURE

## Included parts:


One (1) duct adapter (colors may vary), six (6) 1/2 in. self-drilling screws and one (1) foam gasket.

- 1 Remove adhesive strip and apply foam gasket to back side of duct adapter. (adhesive side should be applied to duct adapter part).

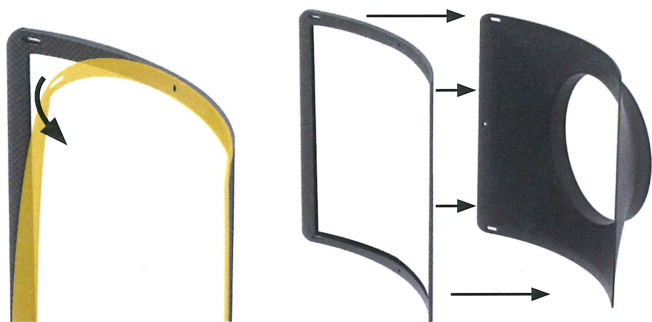


- 2 Align the top center hole of the duct adapter with the 1/16 in. hole on the upper jacket of the water heater and one (1) of the supplied screws using an electric drill driver.


**NOTE: DO NOT** fully tighten the screw. This will allow the bottom of the duct adapter to be correctly positioned

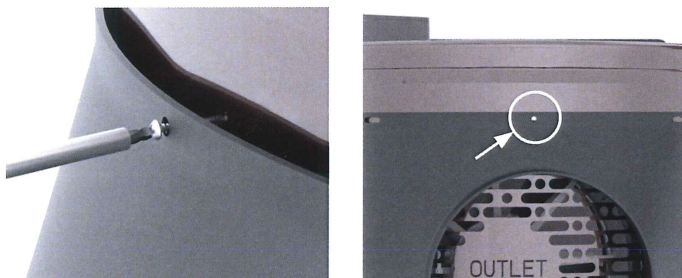


- 3 Align the bottom center hole of the duct adapter like in step #2 and fully tighten the screw to position the adapter properly on the upper jacket. Also, fully tighten the upper screw from step #2.

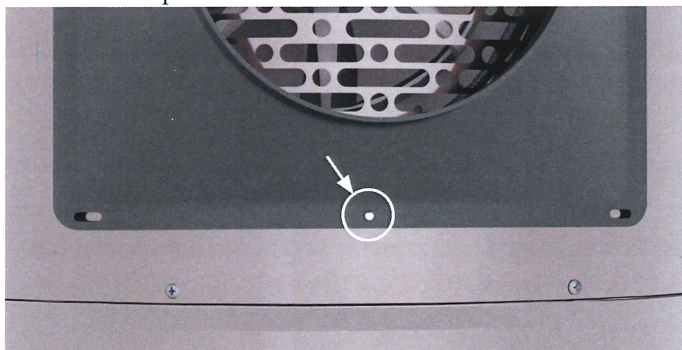

- 4 Secure the left side of the duct adapter with two (2) of the remaining screws starting from the top utilizing the duct adapter holes along its perimeter.

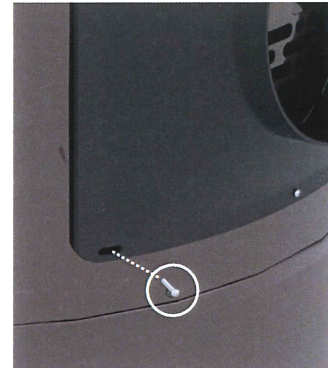

- 5 Repeat step #4 on the right side of the duct adapter.

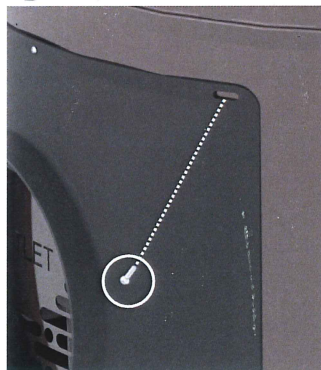

- 6 When installed, this adapter will account for 5 ft. of ducting length. Reference the Use and Care manual for further details about ducting this water heater.

